

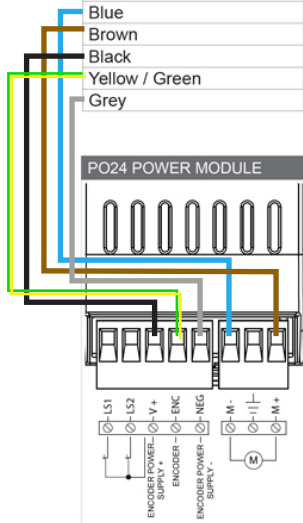
WARNING:

For encoder operation, when in the closed position, both gate panels must rest against a mechanical stop.

WARNING:

Always connect the earth cable to the mains power earth system with a cable minimum cross sectional area of 2.5 mm².

MOTOR CABLE	MOTOR DX	MOTOR SX
Blue	opening	closing
Brown	closing	opening
Black	+ encoder	+ encoder
Yellow / Green	S encoder	S encoder
Grey	- encoder	- encoder

**PO24 CONNECTIONS**

LS1	Limit switch 1 input (only for SUN)
LS2	Limit switch 2 input (only for SUN)
V+	Limit switch / encoder power supply pc (12 Vdc 50 mA MAX)
ENC	Encoder S signal input
NEG	Encoder power supply negative
M-	Motor output
⏏	Earth
M+	Motor output

POWER SUPPLY CONNECTIONS

L	Power supply 230 Vac 50-60 Hz
⏏	Earth
N	Power supply neutral 230 Vac 50-60 H