

SCLAK UNIT

ACTIVATION

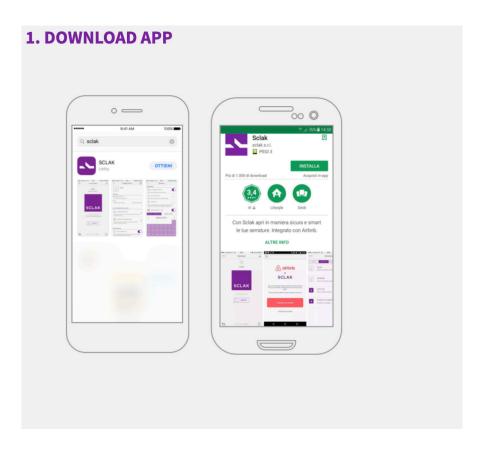

2. INSERT CODE

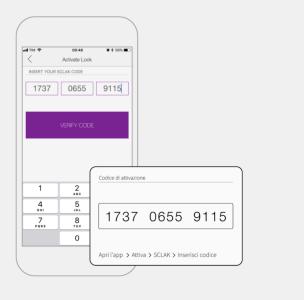

Enter the twelve-digit Activation Code inside the package.

3. CREATE ACCOUNT



Enter the required credentials.

4. IDENTIFY YOUR SCLAK UNIT





Select SCLAK unit that appears in the TO BE ACTIVATED list and tap on to continue the installation process.

5. SET SCLAK 6. SET ADMIN







TEST LOCK

Set unit preferences and test correct operation.



SET NAME AND LOCATION

Set name and description of unit and location.



SET PERMITS AND SECURITY LEVEL

Enter manually the contact details of the Admin.



ADD FROM ADDRESS BOOK

Select contact details from address book.



SET ME AS ADMIN AND OWNER

Create and manage Owners as Admin and use SCLAK as an Owner.

Invite Owner e Guests

After activating SCLAK, tap the button INVITE to invite a new user.

For more information, please visit the management structure and the different users.