




SHORT / CUTS

RADIAL DAMPER


Change damping direction

The Radial Damper works in both directions. The freewheel is in the gear wheel.


1. Remove circlip

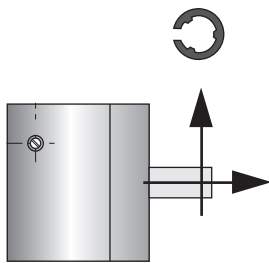

2. Turn gear wheel 180 °.

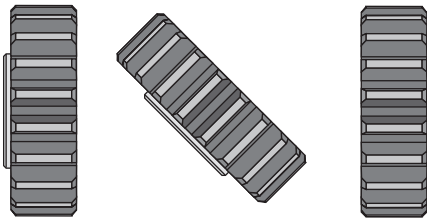

3. Place gear on the axle and refit circlip.

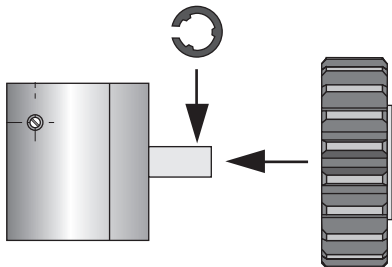

4. Adjust the closing speed.

